

Digi Keypad Door Lock


51005L & 51005R

51000L & 51000R



Important tips:

1. This door lock will replace all standard size door locks.
2. The master PIN code is 111111.
3. The master PIN code allows you to add, delete, and change users PIN's.
4. PIN codes must contain six digits.
5. The memory can hold 200 PIN codes along with 199 user id's.
6. If six beep tones are heard it means the batteries are low and should be changed.
7. To restore the all PIN codes and master PIN code to factory condition, press the reset button located behind the keypad rear panel. Press and hold for two seconds.
8. User Id's can range from 001 to 199.
9. Keeping a written list of user codes that you have programmed into the lock will help when you need to delete.
10. Type in your PIN code. If correct the green light will turn on. You have up to 5 seconds to open the door. If you did not type in your PIN code correctly, the red light will turn on. Wait 2 seconds and try again.
11. To disassemble the lock use the provide tool to unscrew the rear handle.

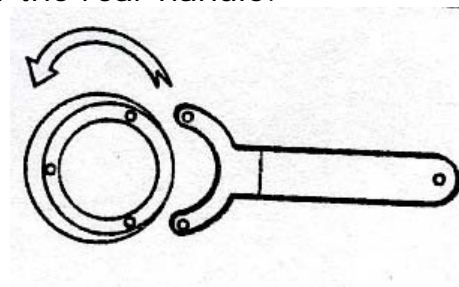

Programming:

Changing Master or User PIN code:

Press	##
Press (existing code)	xxxxxx
Press	***
Press (new code)	xxxxxx
Press (new code again)	xxxxxx

Adding users:

Press	##
Press (master code)	xxxxxx
Press	##**
Press (users code)	xxx
Press (new code)	xxxxxx
Press (new code again)	xxxxxx

Deleting Users:

Press	##
Press (master code)	xxxxxx
Press	*##*
Press (user Id)	xxx
Press (user id again)	xxx

One Key Opening Feature:

This will allow you to unlock the handle by pressing any of the buttons on the keypad except for #.

To turn this feature on:

Press	xx
Press (master code)	xxxxxx
Press	###
Press	###

To turn this feature off:

Press	##
Press (master code)	xxxxxx
Press	###
Press	###

Product Technical Support

Mon-Fri: 9am - 8pm EDT

Sat: 11am - 7pm EDT

Sun: 12pm - 5pm EDT

949.221.9200

support@smarthome.com