

# ENZER

*Technology With Style*

## **USER'S MANUAL**

Touch Screen Caller ID Phone



ET8329TS

FSK/DTMF/ETSI  
Alarm Clock Function

Touch Screen Telephone  
Music Hold & DND

## General Introduction

Thank you very much for purchasing the new **intelligent** Caller ID phone of our **company**.

Backed up by the most advanced high **quality IC** and standard **transmitting** and **receiving** circuit, it assures the authenticity and low noise. It is really the best **choice** for you in its **useful functions** and **novel** design.

In order to use the advanced functions freely, please read the following **specifications** before **use**.

### **Safely Instructions:**

When using **your** telephone **equipment**, the following basic **safety** precautions **should always** be followed to **reduce** the risk of fire, **electric** shock and injury to persons:


1. Read and understand all **instructions**
2. Follow all warnings and **instructions**.
3. Unplug the **product** from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloths for cleaning.
4. Do **not** place this **product** on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
5. Do not **overload** wall outlets and **extension** cords as this can **result in the risk of fire** or electric **shock**.
6. Never push objects of any kind into this **product** through cabinet slots as **they** may touch **dangerous** voltage points or **short** out parts that could **result in a risk of fire** or electric **shock**. Never spill **liquid** of any kind on the **product**.
7. Avoid using this unit during an **electrical** storm, move or **disconnect** the unit, **there** may be a **remote** risk of **electronic** shock from lightning and thunder.

## FEATURES

- FSK/DTMF/ETS) compatible with auto-detected
- Total 70 memories including 50 incoming and 20 outgoing memories
- Touch screen telephone with Scratch-proof.
- Hang-up with induction-electromagnetism design
- LCD contrast adjustable
- 4 levels of ring and speaker volume adjustable
- Incoming and outgoing numbers can be reviewed; deleted and called back
- Auto-redial and back ring function
- Music on hold function
- DO NOT DISTURB function
- Pre-dialing and backspace function
- 3 sets of alarm clock function
- Local area code set and filter
- Call back with "0" headed automatically for IDD call



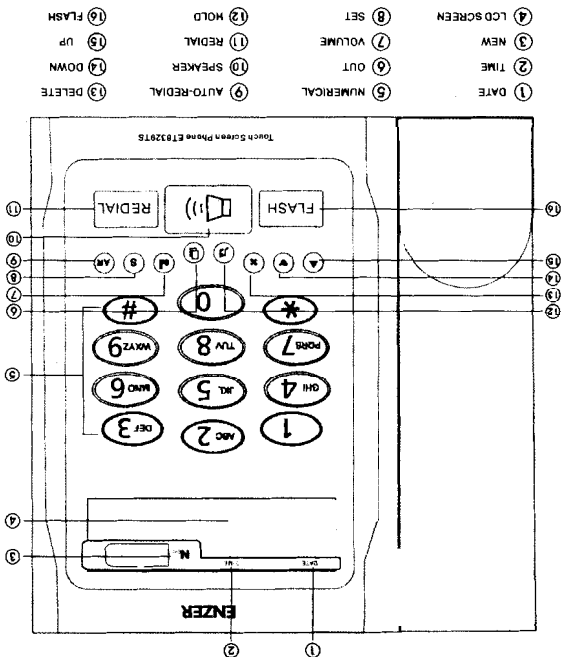


1. Put the in a dry and safe place.
2. Link the telephone handset with the unit using the coiled line, and link the phone set with local network using the modular jack line.
3. Install 2 AAA batteries into the battery house of bottom case with proper polarity.
4. Set the dialing model according to your local system of your network.
5. Apply for the Caller ID service from your local telecom, then it can display caller number when call come

### Setting up





## Operation

1. Check, call back, and **delete** incoming and outgoing numbers

On the on-hook mode, press  key, LCD display 'OUT', to **check** outgoing calls by pressing  or  key; press  key **again**, LCD display "IN", to check **incoming** calls by **press** A or  key. **After found the number**, press AR key to **dial** it out or **press** X key to **delete** it.



2. **Set time**



On the on-hook mode, press and hold S key 2 **seconds**, year **digits will flash**, press A or  key to **adjust** it until real **year** displayed, press S key again, the MONTH. DATE. **TIME** and MINUTES **will flash**, to get real month, data and t i e by pressing A or  key. During the **setting**, press any key to **exl**.

3. **Sot Pulse and Tone dialingmode**

On the on-hook moda, press and hold \* key 3 **seconds**, LCD display " PULSE" **means** PULSE dialing mode is selected, **press** and hold \* key 3 **seconds again**, LCD display " TONE", **means** TONE **dialing moda** is selected.

4. **Set volume**

On the on-hook mode, press  key, LCD will display "-----", press  key to set the ringing **volume** with 4 levels.

On the hang on mode or hands free mode, press  key. LCD will display "-----", press  key to set the hands free volume with 4 levels.

5. **Set LCD contrast**

On the on-hook mode, press AR key to adjust the LCD contrast with 5 levels.

6. **Set Do-not-disturb lime**

On the on-hook mode,

To set 10 hours **do-not-disturb** time, enter into \*2\*10#

To set 8 hours **do-not-disturb** time, enter into \*2\*08#

(0-99 hours time can be set)

To cancel **do-not-disturb** time, enter into 2#

7. **Alarm clock function**

On the on-hook mode, to sat **alarm** clock: There are 3 kind of **alarm** time can be set if **you want** to set it, **the** detail setting as **follow**:

**Enter** into \*61\*0730# to **set** the **first** alarm clock. 0730 means 07:30 alarm clck.

**Enter** into \*62\*1315# to **set** the **second** alarm clock, 1315 means 13:15 alarm clock.

**Enter** into \*63\*1815# to **set** the **third** alarm clock, 1815 means 18:15 alarm clock

Any alarm clock **cen** be **set**, **alerm** ringing will **last** 45 seconds and can be stopped by **pressing** any **key**.

To **cancel** alarm clock, in on-hook **situation**

**Enter** into \*61\*# to **cancel** the **first** alarm clock:

**Enter** into \*62\*# to **cancel** the **second** alarm clock;

**Enter** into \*63\*# to **cancel** the **third** clock

8. **Music on hold function**

**During** phone talk, press  key to hold h e line mth music

9. **Auto on-hook function**

When you forget to hang up or make a wrong hang up, the phone set will detect the **hang**

up Signal and hang up automatically.

### 10. QUICK SETTING LIST FOR KEYPAD

KEY	SETTING	INSTRUCTION
**#	FSK/DTMF SYSTEM TRANSFER	
*2*XX#	SET DND TIME	XX MEANS HOURS (FROM 0-99)
*2*#	CANCEL DND	
*3*XXXX#	SET LOCAL AREA CODE	XXXX MEANS LOCAL AREA CODE
*4*XXX#	SET FLASH TIME	XXX MEANS FLASH TIME
*61*XXXX#	SET FIRST ALARM CLOCK	XXXX MEANS TIME
*62*XXXX#	SET SECOND ALARM CLOCK	XXXX MEANS TIME
*63*XXXX#	SET THIRD ALARM CLOCK	XXXX MEANS TIME
*61*#	CANCEL ALARM CLOCK	
*62*#	CANCEL SECOND ALARM CLOCK	
*63*#	CANCEL THIRD ALARM CLOCK	

### 11. TROUBLESHOOTING

Trouble	Check	Solution
No voice	Whether the handset or transmission line breaks off or not.	Connect them properly or change the line.
Receiving available only	Whether dialing system is proper	Reset the dialing system (P/T)
Noise	a. Whether the circuit breaks off or the line is loose, b. Whether the connector box is moist or rusty.	a. Change the line, b. Change the connector box.
LCD display is weak	Check whether the battery is full of power	Change the battery
Ring only once, then break off but out-dialing is available	a. Whether the connection site is moist; c. If there are extensions, be sure the extension phone is good or extensions are too many; c. Get rid of the bad extensions or check the main engine.	