



## Registering the Security Remote with the Security Console

- Set the codewheel on the Security Remote to the same house code as the Security System.

*Note: The house code for the Security System is downloaded by the **security monitoring station**. The default is A.*

- Fit four **AAA Alkaline** batteries in the battery compartment in the back of the remote.
- Set the slider switch on the Security Console to **INSTALL**.
- Press **ARM**. The console beeps once to confirm that the **keychain** has been registered.
- Return the console slider switch to the **RUN1** or **RUN2** position.

*Note: If the remote **did not** register, remove the label on the front and use a pencil or other pointed object to press the small **CODE** button to generate a new random code. **Press ARM** again to install the remote.*

## Testing the Security Remote

- Set the slider switch on the security console to **RUN1** or **RUNS**.
- **Press ARMAWAY** on the remote. The console beeps once to confirm and **the** ARM indicator lights.
- Press **SECURITY LIGHT ON** and **OFF** to control a light connected to a lamp module with codewheels set to **A13** (or other code downloaded by the security monitoring station).