


Thank you for choosing a PEUGEOT electric pepper mill. Your mill is fitted with the patented  system, giving full adjustability of the level of grind. As it is infinitely variable, you can select the perfect grind, from coarse to fine, to suit any dish.

Important information and safety instructions



Before using your u'select mill for the first time:



- Please read the user guide carefully and follow the instructions to keep your mill in optimum condition.
- Examine your mill to ensure it has not been damaged in transit.
- This electric mill is designed specifically to grind pepper. Do not use it for salt or any other spice, not even the berries sometimes called "pink pepper" or Fagara pepper as they have a tendency to clog the mechanism.
- Maintenance should be limited to cleaning the mill and replacing the batteries or bulb. Any other work by an unqualified person could result in injury to the user.
- Do not insert your fingers or any other object into the grinding mechanism.
- Always keep the mill and its packaging out of the reach of children.
- Do not place or store the mill near any heat source.
- Keep the mill in a dry place away from damp or icy conditions.

GB

- Do not immerse the mill in liquid or put it in a dishwasher. Do not use with wet hands.
- Use only a soft dry cloth to clean - do not use cleaning products or detergent.
- Do not keep your finger on the on/off switch continuously - it is better to grind in short bursts.
- We recommend that you store the mill in an upright position.

Any of the following may cause the batteries to leak and damage your mill:



- Use of batteries past their expiry date.
- Any exposure to a heat source.
- Use of flat batteries.



We recommend that the batteries are removed from the mill if it will not be used for a long period.

The manufacturer will not accept liability arising from any abuse, use or treatment not in accordance with these instructions.

Installing and replacing the batteries

Follow the instructions in diagram 



In order to replace the motor in the motor unit ensure that the arrows  coincide as shown in diagram .

- Use only non-rechargeable AAA/LR03 alkaline mercury free batteries to ensure maximum motor power.


GB

• Always replace all the batteries at the same time with six new AAA/LR03 alkaline batteries of the same brand.

• Install the batteries as indicated by the polarity symbols (+/-) marked inside the battery compartment.

• To protect the environment, remember to dispose of used batteries in environmentally safe containers.

Operation

Filling the pepper compartment: Follow the instructions in diagram **2** .

Clean the contacts on the pepper compartment and the motor compartment with a dry cloth as shown in diagram **2a**.

To use: see diagram **3** .

Light: This mill is fitted with a light that comes on when the grinder is in use (diagram **3**).

To adjust the grind: See diagram **4**

 .

- It is easier to adjust the grind when the mill is in use.
- Select a position by turning the collar at the base of the mill.
- **4a** Turn the collar to the right for a finer grind.
- **4b** Turn the collar to the left for a coarser grind.
- **4c** You can select intermediate grinding positions in addition to the marked positions.
- **4d** Do not turn beyond "STOP" setting.

Cleaning and light bulb replacement

Cleaning: This pepper mill is an electric appliance. Do not immerse in water. Clean only by wiping with a soft, dry cloth.

Replacing the light bulb: See diagram



Trouble-shooting

There are three possible problems:

- The light does not work.
- The motor works but the mill does not grind.
- The motor does not work.

1- Faulty light

Check that the contacts are clean

- Separate the motor compartment from the pepper compartment.
- Clean the contacts on the pepper compartment and the motor compartment with a dry cloth as shown in diagram **2a**.
- Replace the motor compartment on the pepper compartment.

Ensure that a light bulb is fitted

- If one is fitted, it may not be making a contact so replace it (see diagram **5**).
- If there is no light bulb or it is broken: insert a new one as shown in diagram

2- The motor is working but the mill does not grind

- Check that the pepper compartment contains sufficient pepper and nothing else.
- Press the on/off switch with the mill set to coarse grind.

3- The motor is not working

- Replace the batteries as shown in diagram 1.
- Then press the "on/off" switch with the mill set to coarse grind.

If your mill still does not work, return it to your retailer in its original packaging together with the guarantee card that was filled in when it was purchased.

EC Declaration of conformity

- The manufacturer declares that this mill complies with EC standards.

Protection of the environment

- To protect the environment, remember to dispose of used batteries in environmentally safe containers.

Guarantee

We provide a two year guarantee on the electric components. The Peugeot mechanism is covered by the full Peugeot guarantee as of the day of sale to the consumer.

The guarantee does not cover damage and defects resulting from abuse, use or cleaning not in compliance with the instructions contained in this user guide. In addition, it does not cover damage resulting from knocks to the motor unit or any other part of the appliance.

The guarantee only comes into play if the appliance is returned accompanied by the guarantee card duly filled in with the date of purchase and bearing the retailer's signature and stamp.

After inspecting the appliance, the manufacturer will repair the defective parts or make a replacement.