

NOCORD®

WINTERSEAT

12 Volt Heated Seat Cushion for Car, SUV, RV & Trucks.

- **Automatic Temperature Controller**
- **Luxuriously Soft MicroFleece Cover with Heated Lower Back Support**
- **Easy Installation Fastening System. Adjustable to Fit Most Vehicles.**
- **Limited 90 Day Warranty**



MODEL: WWT-2110

Cautions/Warnings

- Study, understand, and follow all instructions before operating this device.
- No alterations shall be made to this product.
- Only attachments and/or adaptors supplied by the manufacturer shall be used.
- Do not use the heated seat cushion if the cushion, or adaptor or electrical cord are damaged.
- Using a damaged heated seat cushion may cause burns, electric shock or fire.
- Do not operate the heated seat cushion with a 24 Volt battery like those found in buses and some tractor trailers.
- Do not leave the heated seat cushion on for more than 24 hours each time you drive.
- Do not use on a wet seat cushion. May cause electric shock.
- Do not let children handle or play with the WinterSeat as it is not a toy.

Installation/Operation *(See Figure Below)

- There are three straps located on the back of the WinterSeat. To begin installation, first slip the two larger straps over the back of your car seat. If you have a headrest, you may put the small, topmost strap around the headrest.
- On the bottom of the WinterSeat there are four velcro straps; two longer ones on the front side and two shorter ones on the back side. After you locate the two shorter straps, you may proceed to push them through the crease of your car seat, so that they protrude from the back of it.
- Now connect the short and long straps that are furthest away from you by taking each one in your hand and connecting them beneath your car seat. Repeat with the short and long straps that are closest to you.
- You are now ready to plug in the WinterSeat. Locate the end of WinterSeat's 12V Lighter Plug and plug it directly into your vehicle's 12V Cigarette Lighter Socket.
- If the WinterSeat Controller's green and red lights are on, then the WinterSeat is in the "On" position. If it is not already on, you may go ahead and turn it on by rotating the knob for heat level until the two lights come on.
- Observe as the WinterSeat warms up to your adjusted setting.
- The WinterSeat has an Energy Saving ~30-Minute Auto Shut-Off Timer. After approximately 30 minutes of use, the WinterSeat will automatically turn off, as indicated when the green and red lights on the Controller are not lit. If the WinterSeat's Auto Shut-Off activates while in use, simply set the controller to the "Off" position, and then turn it back on, adjusting it once more to your desired heat level.

Maintenance

To store, please place your WinterSeat in its box or in a dry place. Avoid contact with sharp edges or pointed objects, which may cut or puncture the seat cushion's surface.

Troubleshooting

If the heated seat cushion does not work, try changing the fuse in the 12 Volt adaptor. A 12 Volt/5 Amp glass fuse can be found at your local electronics/hardware store. Otherwise, please check the fuse in your vehicle.


90 Day Limited Warranty

This product has been engineered and crafted with great care for your satisfaction. WWT Group, Inc. warrants WWT 2110 Nocord WinterSeat 12-Volt heated seat cushion against defects in materials or workmanship and will repair or replace this product, as its option, free of charge for a period of 90 days from the original date of purchase. This warranty does not apply if this product has been damaged by causes beyond control of WWT Group, Inc., including but not limited to accidents, fire, flood or acts of God. This warranty applies only to the original purchase of this product.

To obtain service under this warranty, return the product by mail (postage prepaid and insured) to WWT Group, Inc. at the address: WWT Group, Inc. 212 W 6th Street Richmond, VA 23224. Include your receipt, proof of date of original purchase, and UPC code with a brief description of the problem, along with your name and address.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. WWT GROUP, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. so the above exclusions or limitations may not apply to you.

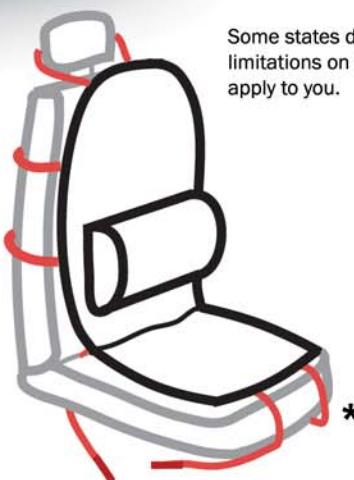

This article contains NEW MATERIAL ONLY	
CONTENT	
FRONT:	Polyester 100%
BACK:	Terylene 88%
	Elastic 7%
	Nylon 5%
INSIDE:	Polypropylene 100%
DO NOT WASH*	
*this product contains electrical components which may become damaged as a result of washing.	

Cleaning Instructions	
Dust and Fuzz	
1. Use a sticky Lint Roller to remove any lint, dust or other cloth fibers from the surface of the WinterSeat	
General Cleaning	
1. Unplug unit.	
2. Wipe with damp cloth.	
3. Allow area to dry thoroughly before plugging it back in.	



Product Made In China