



**NEVER EXPOSE YOUR ENTREEAIR® TO  
TEMPERATURES OVER 140°F (60 °C).**

# OPERATING INSTRUCTIONS

FOR  
SUNCOURT, INC.

## ENTREEAIR®

READ AND SAVE THESE INSTRUCTIONS

BEFORE USE, REMOVE ALL PACKING  
AND DISPLAY MATERIAL.  
IMPORTANT INSTRUCTIONS FOR SAFE USE.

**WITH THE USE OF ANY ELECTRICAL APPLIANCE,**  
it is important to observe all basic precautions to minimize the  
risk associated with use such as electrical shock, fire or injury to  
persons. Read these instructions before using your ENTREEAIR®

- 1) Do not in any way block the air grills of the ENTREEAIR®
- 2) As with any electrical appliance, unplug the EntreeAir® when not in use. Always turn the unit "OFF" before connecting or disconnecting the power cord.
- 3) Do not operate the ENTREEAIR® with a damaged plug or cord, if the unit malfunctions, becomes noisy when operating, has been dropped or otherwise damaged or if the housing is damaged or broken. Return the EntreeAir® to the service address provided for inspection, replacement, or repair.
- 4) The ENTREEAIR® should never be exposed to moisture. Do not use the unit in an open window, bathroom, or laundry area where it may come in contact with water.
- 5) The ENTREEAIR® is designed for indoor use only.
- 6) Locate the ENTREEAIR® and the electrical cord where it will not be tripped over.

- 7) Never run the electrical cord under carpeting, baseboards or scatter rugs or hide it in any way.
- 8) Never insert any object or allow any object to enter the ENTREEAIR® through the grills, as this may damage the unit or cause it to malfunction.
- 9) The motor of the ENTREEAIR® is equipped with a thermal fuse. Blocking the rotation of the fan or the airflow may cause the motor to overheat. Should the motor overheat and the fuse open, replacement of the motor is required.
- 10) Do not use ENTREEAIR® near flammables such as gasoline, paint, or gas.
- 11) The ENTREEAIR® is intended for use as described in the instructions only, other use may cause fire, electrical shock, damage to the unit or injury to persons and will void any warranty by the manufacturer.
- 12) The plug on the power cord of your ENTREEAIR® is "polarized", this is achieved by making one blade of the plug wider than the other. The plug can be inserted into your wall outlet only one way. Do not defeat this safety feature and ensure that if you have to use an extension cord, it is ETL or UL listed or CSA Approved, is in good condition, has a wire size of a least 18 ASG and is a polarized type.
- 13) Pressure on the grills of the ENTREEAIR® may cause the fan impeller to contact these grills and damage the unit.
- 14) Do not use strong detergents or flammable liquids to clean the ENTREEAIR®.
- 15) The housing of your ENTREEAIR® is sealed at the factory. THERE ARE NO USER SERVICEABLE PARTS INSIDE. Attempting to open the ENTREEAIR® housing will expose you to dangerous electricity, may cause fire and will void all warranty.

**NEVER EXPOSE YOUR ENTREEAIR® TO TEMPERATURES OVER 140°F (60 °C).**

*The ENTREEAIR® has been designed to assist in the movement of air from one room in a home to an adjacent room via the door opening.*

*The ENTREEAIR® will effectively move air from a room that is either warmer or cooler than the adjacent room and can be used year round.*

### **INSTALLATION**

The ENTREEAIR® can be installed on the frame of any doorway in either of the top corners.

The unit must be installed on the opposite side of the doorstop that the door closes into.

Follow instructions on provided templates to permanently install two screws in doorframe (screws provided).

The ENTREEAIR® is installed over the screws by placing two of the key-hole slots over the screw heads. Make sure the ENTREEAIR® slips down over the screws and locks into place.

Multiple key-hole slots are provided in the ENTREEAIR® to allow installation in the left or right corners of the doorway and to allow for choice of direction of airflow. Observe the airflow direction marked on the outside of the unit when installing.

Securely attach electrical cord to doorframe with cord clips (clips provided).

Plug unit into a standard 110 volt outlet. Ensure that the cord does not disable the door from closing.

### **MAINTENANCE**

Before cleaning the ENTREEAIR® always disconnect the power cord from the electrical outlet.

Dust may be removed from the exterior surfaces of the ENTREEAIR® using a soft cloth, the round brush attachment of your vacuum cleaner or using a cloth that has been moistened with water and a mild non-abrasive detergent.

Dust accumulation in the interior of the ENTREEAIR® may be removed by using the small round brush attachment of your vacuum cleaner or by attaching your vacuum cleaner hose to the blower side and blowing the dust out.

For service after the warranty period, you may return the ENTREEAIR® well packaged, to avoid damage in shipment, to the manufacturer for repair.



101214  
CONFORMS TO  
ANSI/UL STD 507

"ENTREEAIR" is a Trademark of Suncourt, Inc.

©Suncourt, Inc.