

## Installation Notes Installing the Module Bracket

READ AND UNDERSTAND ALL INSTRUCTIONS:

- Mounting the brackets for use with video modules:
  - Hold the bracket so that the openings for the modules are pointing upward;
  - Insert one grommet into each of the four holes on the inside of the bracket (see Figure 1);
  - Insert a plunger into each of the grommets;
  - Pull back on the plungers to unlatch them;
  - Line up the bracket with the appropriate holes in the enclosure;
  - Push in the plungers to latch the grommets and lock them into the holes in the enclosure.
- Mounting the brackets for use with phone & data modules:
  - Hold the bracket so that the openings for the modules are pointing outward;
  - Insert one grommet into each of the four holes on the inside of the bracket (see Figure 2);
  - Insert a plunger into each of the grommets;
  - Pull back on the plungers to unlatch them;
  - Line up the bracket with the appropriate holes in the enclosure;
  - Push in the plungers to latch the grommets and lock them into the holes in the enclosure.

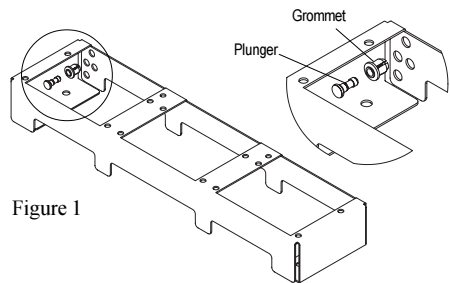


Figure 1

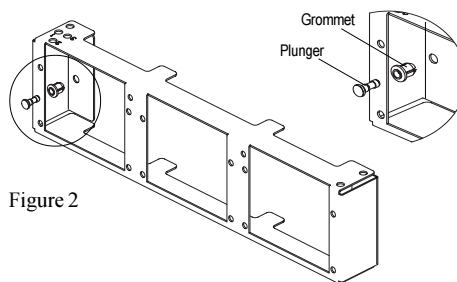


Figure 2

3. Greyfox module brackets are designed to work with other manufacturers' enclosures. There are holes in the brackets that will line up with the mounting holes in those enclosures. They are as follows (see Figure 3 for video mounting holes and Figure 4 for phone and data mounting holes):

- Greyfox or Pass & Seymour
- Open House or Leviton
- OnQ

To mount Greyfox module brackets into any of the above mentioned enclosures, simply follow the information in "1" for video and the information in "2" for phone and data modules.

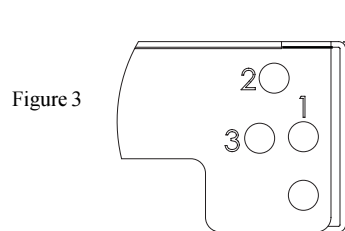


Figure 3

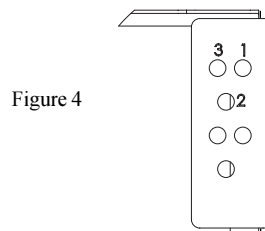


Figure 4

## Installation Notes Installing the Module Bracket

READ AND UNDERSTAND ALL INSTRUCTIONS:

- Mounting the brackets for use with video modules:
  - Hold the bracket so that the openings for the modules are pointing upward;
  - Insert one grommet into each of the four holes on the inside of the bracket (see Figure 1);
  - Insert a plunger into each of the grommets;
  - Pull back on the plungers to unlatch them;
  - Line up the bracket with the appropriate holes in the enclosure;
  - Push in the plungers to latch the grommets and lock them into the holes in the enclosure.
- Mounting the brackets for use with phone & data modules:
  - Hold the bracket so that the openings for the modules are pointing outward;
  - Insert one grommet into each of the four holes on the inside of the bracket (see Figure 2);
  - Insert a plunger into each of the grommets;
  - Pull back on the plungers to unlatch them;
  - Line up the bracket with the appropriate holes in the enclosure;
  - Push in the plungers to latch the grommets and lock them into the holes in the enclosure.

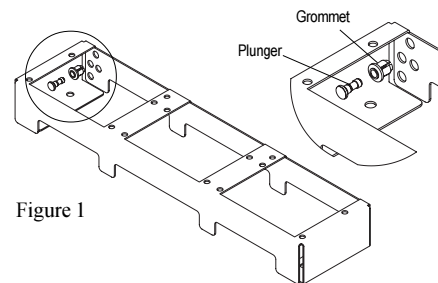


Figure 1

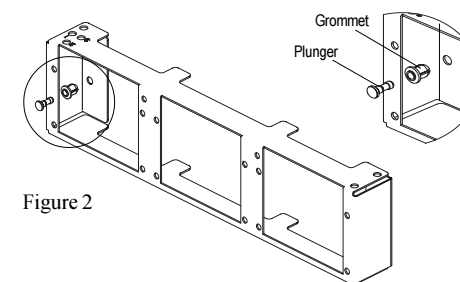


Figure 2

3. Greyfox module brackets are designed to work with other manufacturers' enclosures. There are holes in the brackets that will line up with the mounting holes in those enclosure. They are as follows (see Figure 3 for video mounting holes and Figure 4 for phone and data mounting holes):

- Greyfox or Pass & Seymour
- Open House or Leviton
- OnQ

To mount Greyfox module brackets into any of the above mentioned enclosures, simply follow the information in "1" for video and the information in "2" for phone and data modules.

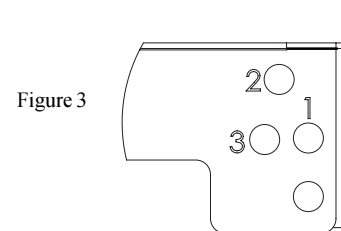


Figure 3

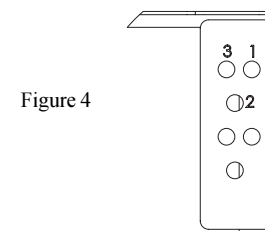


Figure 4