

Single Pole (One location) or 3-Way (Multi-location) Incandescent Dimmer

Cat. No. ACI06-1L, 600W (Lighted)
120VAC, 60Hz

INSTALLATION INSTRUCTIONS

WARNINGS AND CAUTIONS:

- To be installed and/or used in accordance with appropriate electrical codes and regulations.
- If you are unsure about any part of these instructions, consult a qualified electrician.
- To avoid overheating and possible damage to this device and other equipment, do not install to control a receptacle, fluorescent lighting, a motor- or a transformer-operated appliance.
- Use with incandescent or 120V halogen fixtures only.
- Acenti™ dimmers are not compatible with standard 3-way or 4-way switches. They must be used with compatible Acenti™ remotes for multi-location dimming.
- Use only one (1) dimmer in a multi-location circuit with up to 9 coordinating remotes without LEDs or up to 4 matching remotes with LEDs. The remote(s) will turn the light on at the brightness level selected at the dimmer.

WARNINGS AND CAUTIONS:

- Dimmer may not operate with dioded lamps (Sylvania Designer 16™ or Philips PAR-16™).
- Total minimum load must exceed 40W.
- Dimmer may feel warm to the touch during normal operation.
- Recommended minimum wall box depth is 2-1/2".
- Maximum wire length from dimmer to all installed remotes cannot exceed 300 ft.
- Disconnect power at circuit breaker or fuse when servicing, installing or removing fixture.
- Use this device only with copper or copper clad wire. With aluminum wire use only devices marked CO/ALR or CU/AL.

Tools needed to install your Dimmer:


Slotted/Phillips Screwdriver Electrical Tape
Pliers Pencil
Cutters Ruler

Installing Dimmer by itself or with other devices:

If installing Dimmer in a single device application, proceed with the **INSTALLING YOUR DIMMER** section. If installing Dimmer in a multi-device application, proceed as follows:

MULTI-DEVICE APPLICATION

In multi-dimmer installations, the reduction of the dimmer's capacity is required. Breaking off fins is not required on this device. Refer to the chart for maximum load per dimmer.

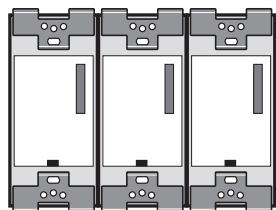


MAXIMUM LOAD PER DIMMER FOR MULTI-DEVICE

Cat. No.	Single	Two Devices	More than 2 Devices
ACI06	600W	600W	500W

INSTALLING YOUR DIMMER


NOTE: Use check boxes when Steps are completed.

Step 1 WARNING: TO AVOID FIRE, SHOCK, OR DEATH; TURN OFF POWER at circuit breaker or fuse and test that power is off before wiring!

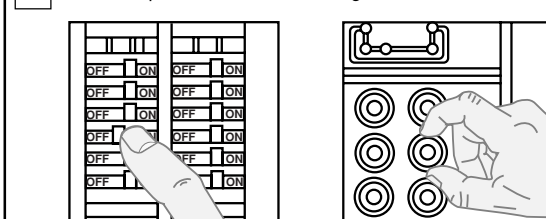

Step 2 Identifying your wiring application (most common):

NOTE: If the wiring in the wall box does not resemble any of these configurations, consult a qualified electrician.

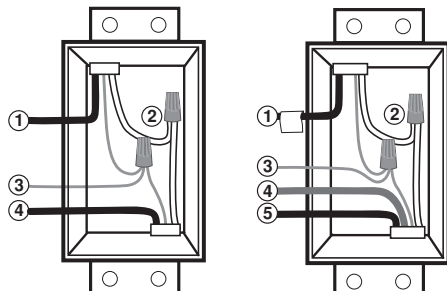

Single-Pole

- Line (Hot)
- Neutral
- Ground
- Load

3-Way


- Line or Load (*See important instruction below*)
- Neutral
- Ground
- First Traveler – note color
- Second Traveler – note color

NOTE: For matching remote w/LEDs installation, the **First Traveler** becomes Line Hot.

IMPORTANT: For 3-Way applications, note that one of the screw terminals from the old switch being removed will usually be a different color (Black) or labeled Common. Tag that wire with electrical tape and identify as the common (Line or Load) in both the dimmer wall box and remote wall box.

Step 3 Preparing and connecting wires:

This dimmer can be wired using side wire terminal screws or through backwire openings. Choose appropriate wire stripping specifications accordingly.

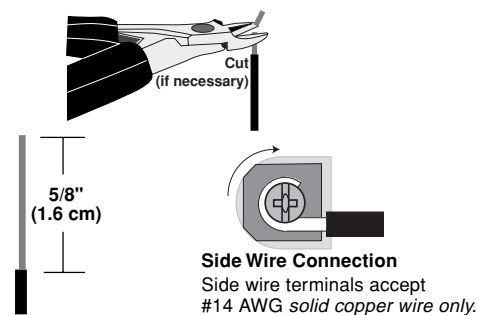

Step 3 cont'd



Strip Gage (measure bare wire here or use gage on back of the dimmer)

Back Wire (either hole may be used)
Back wire openings use #14-12 AWG solid copper wire only.

- Make sure that the ends of the wires from the wall box are **straight (cut if necessary)**.
- Remove insulation from each wire in the wall box as shown.

Step 4 Installing your Alignment Plate:

Important Notice for Installer

To achieve proper aesthetic installation of the Acenti™ products, the wall surface surrounding the wall box opening must be fairly flat and free of irregularities. The wall box must be level and recessed or flush to the wall surface. The Acenti installation system allows for adjustments that will correct minor flaws that may be present in the installation area.


This device must be installed with the Acenti™ Alignment Plate. The Alignment Plate is packaged with the Acenti™ Wallplate, which is sold separately from this device.

The Alignment Plate will function properly only if it is mounted to a flat wall surface as described above.


- Leviton recommends to temporarily position the Alignment Plate prior to wiring the device. If the wall box wires extend at least 6 inches out of the wall box, it is also possible to install the Alignment Plate after the device has been wired (**refer to Wallplate instruction sheet**).
- The Alignment Plate must be installed with the tab towards the bottom.
- Leviton recommends the following 3 methods to temporarily hold the Alignment Plate – use of device mounting screw, use of wall box wires, or use of electrical tape (**refer to the following figures**):

Step 4 cont'd


Alignment Plate Held By Mounting Screw

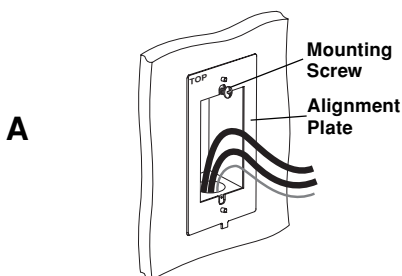

Alignment Plate Held By Wires


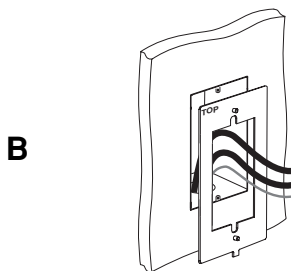


Alignment Plate Held By Tape

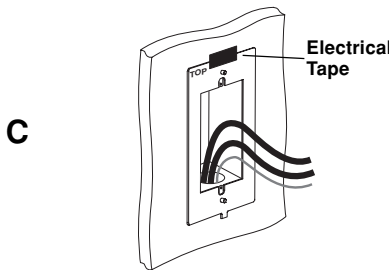

- For Single-Pole Application, go to Step 5a.
- For 3-Way Coordinating Remote (no LEDs) Application, go to Step 5b.
- For 3-Way Matching Remote (with LEDs) Application, go to Step 5c.

Step 5a Single-Pole Wiring Application:

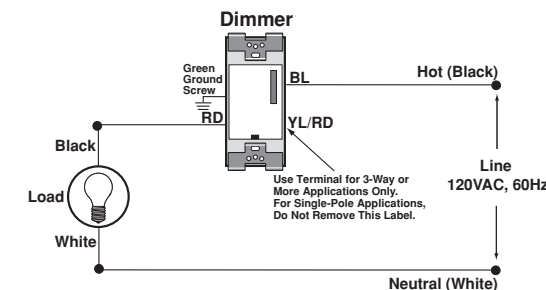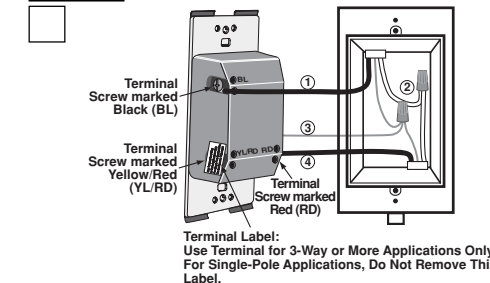


WIRING DIMMER:


Connect wires per WIRING DIAGRAM as follows:

- Green or bare copper wire in wall box to Green terminal screw.
- Line Hot wall box wire to terminal screw marked "BL".
- Load wall box wire to terminal screw marked "RD".
- Dimmer terminal screw marked "YL/RD" should have Red insulation label affixed.
- NOTE:** If insulating label is not affixed to terminal screw marked "YL/RD", use electrical tape to cover.
- Proceed to Step 6.

Step 5b 3-Way Wiring with Coordinating Remote (no LEDs) Application:

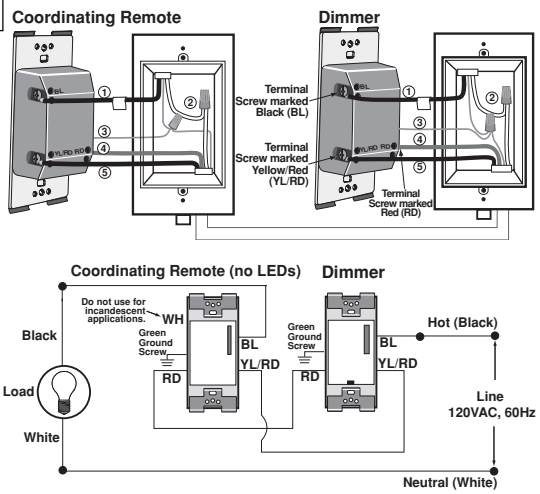

Step 5c 3-Way Wiring with Matching Remote (w/LEDs) Application:

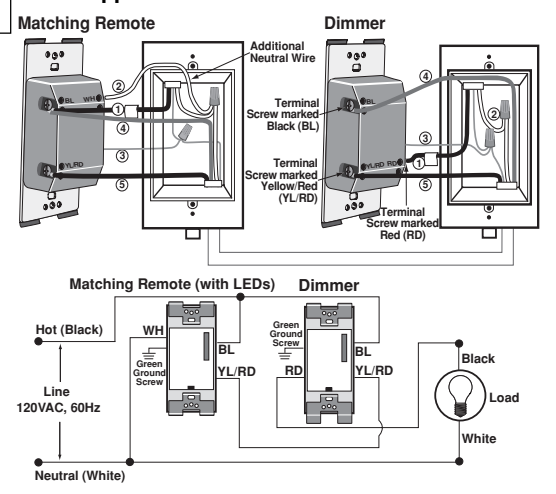

WIRING DIMMER:

- Connect wires per WIRING DIAGRAM as follows:**
- NOTE:** When using the coordinating remote without LEDs, the dimmer can be installed on either the Line or Load side of the 3-way circuit.
- NOTE:** Maximum wire length from dimmer to all installed remotes cannot exceed 300 ft.
- Green or bare copper wire in wall box to Green terminal screw.
 - Line Hot (common) wall box wire identified (tagged) when removing old switch to terminal screw marked "BL".
 - First Traveler wall box wire to terminal screw marked "RD" (note wire color). This traveler from the dimmer must go to the terminal screw on the remote marked "RD".
 - Remove Red insulating label from terminal screw marked "YL/RD".
 - Second Traveler wall box wire to terminal screw marked "YL/RD" (note wire color). This traveler from the dimmer must go to the terminal screw on the remote marked "YL/RD".

WIRING COORDINATING REMOTE:

- Connect wires per WIRING DIAGRAM as follows:**
- NOTE:** Maximum wire length from dimmer to last remote is 300ft.
- Green or bare copper wire in wall box to Green terminal screw.
 - Load wall box wire identified (tagged) when removing old switch to terminal screw marked "BL".
 - First Traveler wall box wire (note color as above) to terminal screw marked "RD". This traveler from the remote must go to the terminal screw on the dimmer marked "RD".
 - Second Traveler wall box wire (note color as above) to terminal screw marked "YL/RD". This traveler from the remote must go to the terminal screw on the dimmer marked "YL/RD".
 - Remote terminal screw marked "WH" should have White insulation label affixed.
 - NOTE:** If insulating label is not affixed to terminal screw marked "WH", use electrical tape to cover.
 - Proceed to Step 6.**

NOTE: The dimmer **must** be installed in a wall box that has a Load connection. The matching remote **must** be installed in a wall box with a Line Hot connection and a Neutral connection. A neutral wire to the matching remote needs to be added as shown. If you are unsure about any part of these instructions, consult a qualified electrician.

NOTE: Maximum wire length from dimmer to all installed remotes cannot exceed 300 ft.

WIRING MATCHING REMOTE (wall box with Line Hot connection):

- Connect wires per WIRING DIAGRAM as follows:**
- Green or bare copper wire in wall box to Green terminal screw.
 - Line Hot (common) wall box wire identified (tagged) when removing old switch and First Traveler to dimmer terminal screw marked "BL".
 - Second Traveler wall box wire from dimmer to remote terminal screw marked "YL/RD" (note wire color). This traveler from the remote must go to the terminal screw on the dimmer marked "YL/RD".
 - Line Neutral wall box to remote terminal screw marked "WH".


WIRING DIMMER (wall box with Load connection):

- Connect wires per WIRING DIAGRAM as follows:**
- Green or bare copper wire in wall box to Green terminal screw.
 - Load wall box wire identified (tagged) when removing old switch to dimmer terminal screw marked "RD".
 - First Traveler Line Hot to dimmer terminal screw marked "BL".
 - Remove Red insulating label from terminal screw marked "YL/RD".
 - Second Traveler wall box wire (note color as above) to dimmer terminal screw marked "YL/RD". This traveler from the dimmer must go to the terminal screw on the remote marked "YL/RD".
 - Proceed to Step 6.**

Step 6 Testing your Dimmer prior to completely mounting in wall box:

- If Alignment Plate is temporarily positioned using screw as in **Step 4A**, remove screw at this point.
- Position all wires to provide room in outlet wall box for device.
- Ensure that the word "TOP" is facing up on the device strap.
- Partially screw in mounting screws in wall box mounting hole.

Step 6 cont'd

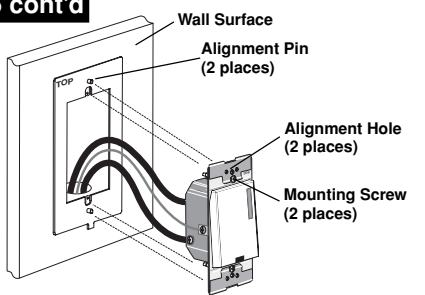

NOTE: Dress wires with a bend as shown in diagram in order to relieve stress when mounting device.

- Restore power at circuit breaker or fuse.
- Press pad until locator light is OFF. Lights should turn ON. If lights do not turn ON, press the DIM/BRIGHT Up Arrow until the lights brighten.

If lights still do not turn ON, refer to the TROUBLESHOOTING section.

Step 7 Dimmer Mounting:

To complete the Acenti™ Dimmer and Wallplate installation, please refer to the instructions included with the Acenti™ Wallplate and Alignment Plate.

OPERATION

NOTE: The locator light will illuminate when the load is in the OFF position to facilitate access in the dark.

NOTE: If using the dimmer in a 3-way application, the lights will turn ON at brightness set on dimmer's DIM/BRIGHT bar. The lighting can be controlled from either the dimmer or the remote location.

Push Pad (Default settings)

Turn ON from OFF position: Tap – Lights turn ON to preset level. Press and Hold – Lights turn ON to full bright.

Turn OFF from ON position: Tap – Lights turn OFF. Press and Hold until LED in LED Brightness Display starts to blink – Lights remain ON for 10 seconds and then turn OFF.

DIM/BRIGHT Bar BRIGHTEN:

Press DIM/BRIGHT Bar Up Arrow – Lights brighten to desired level.

DIM:

Press DIM/BRIGHT Bar Down Arrow – Lights dim to desired level. If you continue to hold, the lights will DIM to minimum level and then turn OFF.


NOTE: When lights are OFF you can change the light level that the lights will turn ON to using the DIM/BRIGHT Bar.

If there is a power outage, the lights will return to the last setting before the power interruption, when the power is restored.

Air-Gap Switch: Gently pull the bottom of the push pad forward until the bottom of the pad slightly lifts off the strap to engage the air-gap switch on the dimmer only. This will cut power to the fixture to replace the bulb. After servicing is complete, push the push pad back for normal operation.

NOTE: This device has a removable push pad. If there is a need to re-install the push pad, proceed as follows:

- Line up tabs located on top back of pad with openings in the top of strap and gently press in.
- Line up tab located on bottom back of pad with opening in the bottom of strap and gently press in.
- Press bottom of push pad to re-engage.

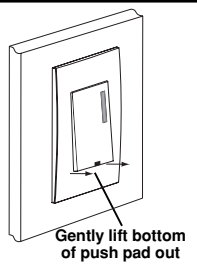

ADVANCED PROGRAMMING FEATURES

- Set Minimum Brightness:** Set the minimum brightness level that the lights can dim to prior to turning full OFF.
- Set Dim-Lock:** Set the brightness level that the lights will turn on to regardless of the previous light level at which they were turned OFF.
- Set Fade Rate:** Set the amount of time (in seconds) that the lights will have to turn ON or OFF. Fade rates can be set to one of five different settings.

Advanced Features Summary			
Mode	Description	Range	Default
1	Set Min. Brightness	1-50%	25%
2	Set Dim-Lock Level	0-100%, 0=no lock	0
3	Select Fade Rate	1, 2, 3, 4 or 5	Preset #1


To Program:

NOTE: Have a flashlight handy if this dimmer controls the only light source in the room.

- Gently pull the bottom of the push pad forward until the bottom of the pad slightly lifts off the strap to engage the air-gap switch on the dimmer only and wait for 5 seconds.
- Press and hold push pad for 7 seconds until the locator light starts blinking. The top LED (LED 1) in the brightness display will also start to blink.
- Upon releasing the push pad, the locator light will indicate that the dimmer is in Set Minimum Brightness mode (Mode 1) by blinking once per second.
- To change the current Minimum Brightness level, use the DIM/BRIGHT Bar to choose the level desired from 1-50%. When adjustment is made, the setting is automatically saved. Tap the push pad and the locator light will blink twice per second to indicate that it is now in the Set Dim-Lock Level mode (Mode 2).
- To change the current Dim-Lock level, use the DIM/BRIGHT Bar to choose the level desired from 0-100%. If the Dim-Lock feature is not desired, press and hold the down arrow until no LED is lit. When adjustment is made, the setting is automatically saved. Tap the push pad and the locator LED will blink three times per second to indicate that it is now in the Set Fade Rate mode (Mode 3).
- The LED Brightness Display is separated into 5 segments. To change the current Fade Rate, use the DIM/BRIGHT Bar to move the LED to the desired preset. Preset 1 is the LED closest to the top and Preset 5 is the closest to the bottom (refer to chart for settings). When the adjustment is made, the setting is automatically saved. Tap the push pad to exit the programming mode. If the sequence is not completed within 3 minutes, the dimmer will return to its previous settings.

Fade Rate Presets			
Preset	LED**	Fade On	Fade Off
1*	1	Approx. 1.5s from full off	Approx. 3s from full on
2***	2	No Fade	No Fade
3	3	No Fade	Approx. 3s from full on
4	4	Approx. 1.5s from full off	Approx. 5s from full on
5	5	Approx. 1.5s from full off	Approx. 10s from full on

* default
 ** LED #1 is on the top
 *** The press and hold feature for the 10 second delayed off is disabled in this mode.

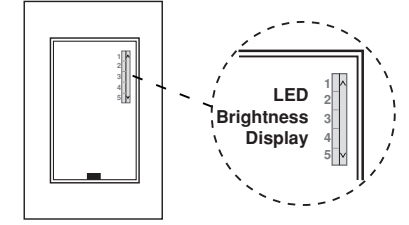

TROUBLESHOOTING

- Lights Flickering**
 - Lamp has a bad connection.
 - Wires not secured firmly under terminal screws of dimmer and/or remote.
- Light does not turn ON and Locator LED does not turn ON**
 - Circuit breaker or fuse has tripped.
 - Lamp is burned out.
 - Lamp Neutral connection is not wired.
- Intermittent dimmer operation**
 - Minimum load is under 40W.
- Remote does not operate lights**
 - Ensure that total wire length does not exceed 300 ft.

For additional information, contact the Acenti™ Information Hotline at 1-888-4-ACENTI or visit Leviton's website at www.leviton.com/acenti

U.S. & Foreign Patents Pending
 Copyright© 2004 Leviton Manufacturing Co., Inc.
 All Rights Including Trade Dress Rights Reserved

FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF an ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving Antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/tv technician for help.

LIMITED 5 YEAR WARRANTY AND EXCLUSIONS

Leviton warrants to the original consumer purchaser and not for the benefit of anyone else that this product at the time of its sale by Leviton is free of defects in materials and workmanship under normal and proper use for five years from the purchase date. Leviton's only obligation is to correct such defects by repair or replacement, at its option, if within such five year period the product is returned prepaid, with proof of purchase date, and a description of the problem to **Leviton Manufacturing Co., Inc., Att: Quality Assurance Department, 59-25 Little Neck Parkway, Little Neck, New York 11362-2591.** This warranty excludes and there is disclaimed liability for labor for removal of this product or reinstallation. This warranty is void if this product is installed improperly or in an improper environment, overloaded, misused, opened, abused, or altered in any manner, or is not used under normal operating conditions or not in accordance with any labels or instructions. **There are no other or implied warranties of any kind, including merchantability and fitness for a particular purpose,** but if any implied warranty is required by the applicable jurisdiction, the duration of any such implied warranty, including merchantability and fitness for a particular purpose, is limited to five years. **Leviton is not liable for incidental, indirect, special, or consequential damages, including without limitation, damage to, or loss of use of, any equipment, lost sales or profits or delay or failure to perform this warranty obligation.** The remedies provided herein are the exclusive remedies under this warranty, whether based on contract, tort or otherwise.